

SLAMf

Технические характеристики

По вопросам продаж и поддержки обращайтесь:

Алматы (7273)495-231	Казань (843)206-01-48	Новокузнецк (3843)20-46-81	Смоленск (4812)29-41-54
Архангельск (8182)63-90-72	Калининград (4012)72-03-81	Новосибирск (383)227-86-73	Сочи (862)225-72-31
Астрахань (8512)99-46-04	Калуга (4842)92-23-67	Омск (3812)21-46-40	Ставрополь (8652)20-65-13
Барнаул (3852)73-04-60	Кемерово (3842)65-04-62	Орел (4862)44-53-42	Сургут (3462)77-98-35
Белгород (4722)40-23-64	Киров (8332)68-02-04	Оренбург (3532)37-68-04	Тверь (4822)63-31-35
Брянск (4832)59-03-52	Краснодар (861)203-40-90	Пенза (8412)22-31-16	Томск (3822)98-41-53
Владивосток (423)249-28-31	Красноярск (391)204-63-61	Пермь (342)205-81-47	Тула (4872)74-02-29
Волгоград (844)278-03-48	Курск (4712)77-13-04	Ростов-на-Дону (863)308-18-15	Тюмень (3452)66-21-18
Вологда (8172)26-41-59	Липецк (4742)52-20-81	Рязань (4912)46-61-64	Ульяновск (8422)24-23-59
Воронеж (473)204-51-73	Магнитогорск (3519)55-03-13	Самара (846)206-03-16	Уфа (347)229-48-12
Екатеринбург (343)384-55-89	Москва (495)268-04-70	Санкт-Петербург (812)309-46-40	Хабаровск (4212)92-98-04
Иваново (4932)77-34-06	Мурманск (8152)59-64-93	Саратов (845)249-38-78	Челябинск (351)202-03-61
Ижевск (3412)26-03-58	Набережные Челны (8552)20-53-41	Севастополь (8692)22-31-93	Череповец (8202)49-02-64
Иркутск (395)279-98-46	Нижний Новгород (831)429-08-12	Симферополь (3652)67-13-56	Ярославль (4852)69-52-93
Россия (495)268-04-70	Киргизия (996)312-96-26-47	Казахстан (7172)727-132	

SLAMf Series

Elastomer Sealed, Digital,
Gas Mass Flow Controllers & Meters
for Hosedown/Washdown Hazardous Area Applications



Model SLA5850 with
EtherNet/IP™

Whether it's dust, moisture, temperature extremes or washdown requirements, the SLAMf Series thermal mass flow controllers and meters deliver the precise accuracy and long-term stability of our proven SLA5800 family of meters and controllers. A specially engineered IP66 enclosure protects our advanced digital electronics and ensures stable, accurate measurement and control of your process-critical gas and liquid mass flows. The SLAMf Series is well suited for chemical and petrochemical research, laboratory, analytical, fuel cell, biotechnology, and life science applications, among others.

Highlights of the SLAMf Series mass flow products include: industry leading long term stability; accuracy backed by superior 17025 metrology systems and methods using primary calibration systems directly traceable to international standards, and a broad range of analog and digital I/O options to suit virtually any application. An independent diagnostic/service port permits users to set alarms and diagnostics, tune, troubleshoot or change flow conditions without removing the mass flow controller from service.

The SLAMf Series provides a highly configurable platform based on a simple modular architecture. The feature set was carefully selected to enable drop-in replacement and upgrade of many brands of mass flow controllers. With the wide range of features and options available, the SLAMf Series provides users with a single platform to support a broad range of applications.

Features	Benefits
IP66 rated hardened enclosure	Ensures process accuracy and control in harsh conditions (equivalent to NEMA4X)
Industry-leading long-term sensor stability	Increased system uptime and reduced cost of ownership by reducing maintenance and eliminating periodic recipe adjustments and/or recalibrations
User accessible service port	Simplified installation, start-up, troubleshooting and access to diagnostics provides maximum uptime
Alarms and diagnostics	Ensures device is operating within user specified limits for high process yield uptime
Superior valve technology	Minimum leak-by, wide turndown, fast response and superior corrosion resistant materials reduces overall gas panel cost and increases throughput
High accuracy traceable to international standards	Calibration by verified metrology systems ensures precise process gas flow control
Simple modular design	Easy-to-service elastomer sealed design provides for factory or field service maximizing uptime and reducing total cost of applications

Superior Thermal Flow Measurement Sensor

Brooks' sensor technology combines:

- Excellent signal to noise performance for good accuracy at low setpoints
- Superior long-term stability through enhanced sensor design, manufacturing and extensive burn-in process
- Isothermal packaging to reduce sensitivity to external temperature changes
- Corrosion resistant sensor flow path

Advanced Diagnostics

The mass flow controller remains the most complex and critical component in gas delivery systems. When dealing with highly toxic or corrosive gases, removing the mass flow controller to determine if it is faulty should be the last resort. In response to this, Brooks pioneered smarter mass flow controllers with embedded self-test routines and introduced an independent diagnostic/service port to provide the user with a simple interface, for troubleshooting without disturbing flow controller operation.

IP66 Rating

The SLAMf Series provides the highest rated enclosure: IP66 Ingress Protection (equivalent to NEMA4X). These are used to define levels of sealing effectiveness of electrical enclosures against intrusion from foreign bodies (tools, dirt etc.) and moisture.




- IP66 Enclosure - IP rated as "dust tight" and protected against heavy seas or powerful jets of water.
- NEMA4X is intended mainly for outdoor use where extra protection against moisture and wind driven rain is required.

Broad Array of Communication Options

Traditional 0-5 Vdc and 4-20mA analog options as well as RS485 digital communications are available ("S-protocol", based on HART). Control interfaces via digital network protocols including EtherNet/IP™, PROFINET, DeviceNet®, and Profibus® are also available. EtherNet/IP™ and PROFINET are a modern, high-speed digital protocol that permits multiple, additional diagnostics to provide MFC users with rich, real-time system information. DeviceNet® has been certified by the ODVA (Open DeviceNet Vendor's Association). EtherNET/IP™ and PROFINET are pending industry conformance certification.

Multi-gas/Multi-range Capabilities

The SLAMf Series multi-gas and multi-range capabilities reduce inventory. Storage and pre-programming of up to 6 gas calibrations easily permits users to switch between different gasses and ranges on a single device.

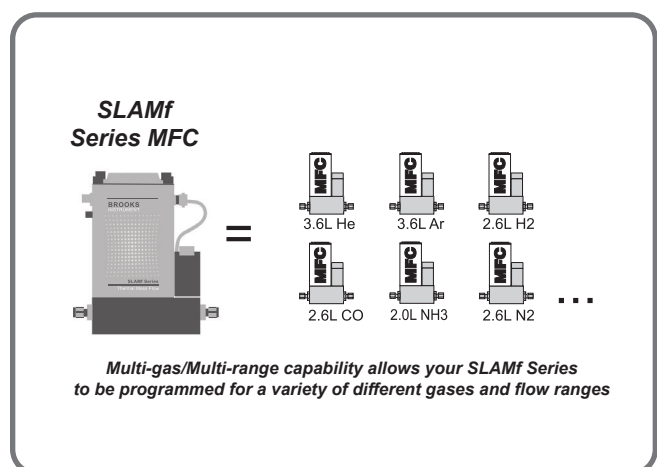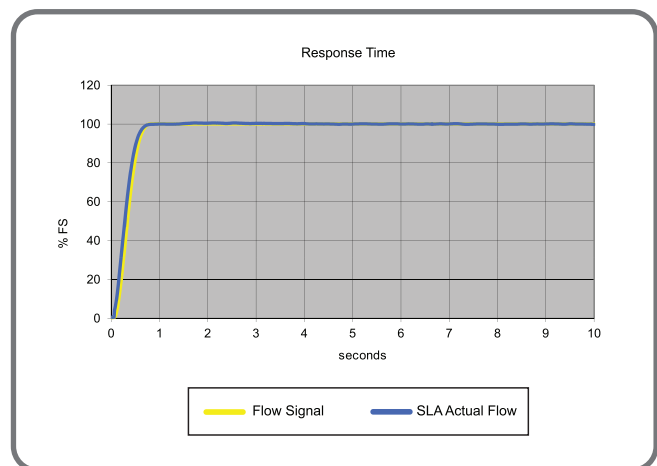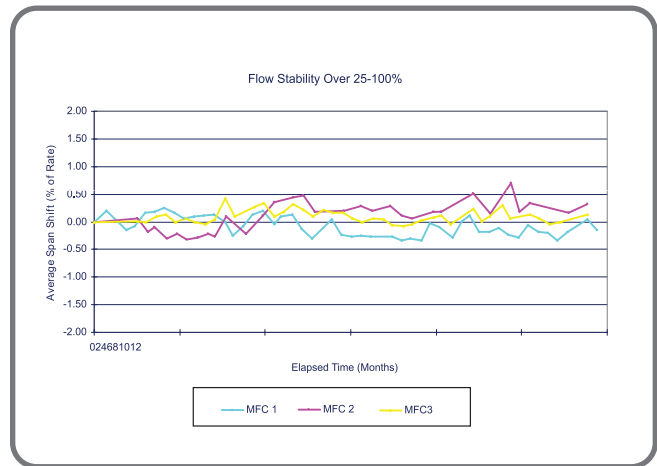

SLAMf Series Standard

Flow Ranges and Pressure Ratings:

Mass Flow Controller Model	Mass Flow Meter Model	Flow Ranges N2 Eq. Ratings		Maximum Operating Pressure psi/bar		PED Module H Category
		Min. F.S.	Max. F.S.	Standard ¹	Optional ¹	
SLAMf50	SLAMf60	0.003	50 slpm	1500 psi/103 bar	4500 psi/310 bar	SEP
SLAMf51	SLAMf61	15	150 slpm ²	1500 psi/103 bar ³	NA ⁴	SEP
SLAMf53	SLAMf63	100	2500 slpm	1000 psi/70 bar	NA	1 for all 150 lb flanges 2 for all other connections
-	SLAMf64	18	2160 m ³ /h	Flow rate dependant		1-1/2" - 100 bar ⁵ 2" & 3" - 85 bar 4" & 6" - 70 bar 8" - 50 bar

¹ Sanitary fittings - Model code 5A, 5B, 5C, 5D & 5E rated to 500 psi Maximum Pressure (see Table VI on page 12)

² 600 lpm of H2 possible with decreased accuracy. Greater than 40 psig inlet required for flows greater than 100 lpm N₂ equivalent

³ 1000 psi/70 bar for UL Certificate

⁴ 4500 psi/310 bar available as a special on SLAMf61 only

⁵ Pressure per body size as noted or maximum pressure of the selected flange; see Instruction and Operations Manual

	SLAMf50/60	SLAMf51/61	SLAMf53/63	SLAMf64
PERFORMANCE				
Full Scale Flow Range (N ₂ , Eq. 0 Deg C Ref)	0.003 - 50 slpm	15 - 150 slpm	100 - 1100 slpm	>1100 - 2500 slpm
Flow Accuracy—17025 Certified Devices (Includes linearity, excludes calibration system measurement uncertainty per SEMI E69) ⁶	±0.6% of S.P. (20-100% FS), ±0.12% FS (<20% FS)			±0.6% of FS
Flow Accuracy (Includes linearity and calibration system measurement uncertainty per SEMI E69) ⁶	±0.9% of S.P. (20-100% FS), ±0.18% of F.S. (<20% FS)			±1.0% of FS
Control Range N₂, eq.	100:1 for FS from 1-50 slpm (50:1 for all other FS flows)			N/A
Repeatability & Reproducibility	0.20% S.P			±0.25% SP
Linearity	Included in accuracy			
Response Time (Settling Time within ±2% F.S. for 0-100% command step)	< 1 second		< 3 seconds	
Zero Stability	< ± 0.2% FS per year			
Temperature Coefficient	Zero: <0.05% of FS per °C Span: < 0.1% of SP per °C			
Pressure Coefficient	±0.03% per psi (0-200 psi N ₂)			
Attitude Sensitivity	<0.2% FS maximum deviation from specified accuracy after re-zeroing			

⁶ Accuracy at calibration conditions ; accuracy spec valid across the full control range

RATINGS				
Operating Temperature Range	-14 to 65°C (7 to 149°F) ⁷			
Minimum Pressure Differential (Controllers)	5 psi/0.35 bar	10 psi/0.69 bar	Min.: 7.5 psi/0.52 bar at 500 lpm Min.: 14.5 psi/1.00 bar at 1000 lpm Min.: 35.0 psi/2.41 bar at 2500 lpm	N/A
Maximum Pressure Differential (Controllers)	Application specific up to 1500 psi/103.4 bar ⁸	50 psi/3.45 bar	290 psi/20.0 bar	N/A
Leak Integrity (external)	1x10 ⁻⁹ atm. cc/sec He			
Valve Shut Down (leak by) ^{9 10}	<1% of FS			N/A

MECHANICAL		
Valve Type	Normally Closed, Normally Open, Meter	N/A
Primary Wetted Materials	316, 316/316L Stainless Steel, High Alloy, Stainless Steel, Viton [®] fluoroelastomers, Buna-N, Kalrez [®] , Teflon [®] /Kalrez [®] , and EPDM	

DIAGNOSTICS	
Status Lights	MFC Health, Network Status
Alarms ¹¹	Control Valve Output, Flow Totalizer, Network Interruption, Over Temperature, Power Surge/Sag, Service Required
Diagnostic/Service Port	RS485 via 2.5mm jack

⁷ Hazardous area certifications have a temperature range limitation of 0-65°C.

⁸ >1500 PSI DP as a Special Order

⁹ Metal and Teflon Seats are <5% of Full Scale

¹⁰ Leak-by and valve shutdown specs for normally closed valve type

¹¹ Alarm modes are dependent on the communications interface. These are described in the corresponding digital communication interface manual

Electrical Specifications

Communication Protocol	RS485	Profibus®	DeviceNet™	EtherNet/IP™ & PROFINET
Electrical Connection	Terminal Block Connections via 1/2" NPT (F) Conduit Optional: PG11 Cable Gland or M20 x 1.5 Conduit			1x 5-pin M8 Male Nano Change Connector / 2x 4-pin M12 Female D Coded Connector
Analog I/O	0-5 V, 1-5 V, 0-10 V, 0-20 mA, 4-20 mA		N/A	N/A
Power Max./Purge	From +13.5 Vdc to +27 Vdc		From +11 Vdc to +25 Vdc	From +13.5 Vdc to +27 Vdc
Power Requirements Watts, Max.	Valve Orifice > 0.032": 8 W Valve Orifice ≤ 0.032": 5 W Without Valve: 2 W		Valve Orifice > 0.032": 10 W Valve Orifice ≤ 0.032": 7 W Without Valve: 4 W	Valve Orifice > 0.032": 11 W Valve Orifice ≤ 0.032": 7 W Without Valve: 3 W
Embedded Browser Interface	N/A		N/A	The Default Network Address is 192.168.100.1 EtherNet/IP: Default Network Configuration is DHCP PROFINET: The Default Name is "sla-mfc"

FLOW INPUT (VOLTAGE) SPECIFICATIONS

Nominal Range	0-5 Vdc, 1-5 Vdc or 0-10 Vdc
Full Range	(-0.5) -11 Vdc
Absolute Max.	18 V (without damage)
Input Impedence	>990 kOhms
Required Max. Sink Current	0.002 mA

FLOW INPUT (CURRENT) SPECIFICATIONS

Nominal Range	4-20 mA or 0-20 mA
Full Range	0-22 mA
Absolute Max.	24 mA (without damage)
Input Impedence	100 Ohms

FLOW OUTPUT (VOLTAGE) SPECIFICATIONS

Nominal Range	0-5 Vdc, 1-5 Vdc or 0-10 Vdc
Full Range	(-1)-11 Vdc
Min Load Resistance	2 kOhms

FLOW OUTPUT (CURRENT) SPECIFICATIONS

Nominal Range	0-20 mA or 4-20 mA
Full Range	0-22 mA (@ 0-20 mA); 3.8-22 mA (@ 4-20 mA)
Max. Load	380 Ohms (for supply voltage: < 16 Vdc)

ANALOG I/O ALARM OUTPUT*

Type	Open Collector
Max. Closed (On) Current	25 mA
Max. Open (Off) Leakage	1 μA
Max. Open (Off) Voltage	30 Vdc

ANALOG I/O VALVE OVERRIDE SIGNAL SPECIFICATIONS**

Floating/Unconnected	Instrument controls valve to command set point
VOR < 0.3 Vdc	Valve Closed
1 Vdc < VOR < 4 Vdc	Valve Normal
VOR > 4.8 Vdc	Valve Open
Input Impedence	800 kOhms
Absolute Max. Input	(-25 Vdc) < VOR < 25 Vdc (without damage)

* The Alarm Output is an open collector or "contact type" that is CLOSED (on) whenever an alarm is active. The Alarm Output may be set to indicate any one of various alarm conditions.

** The Valve Override Signal (VOR) is implemented as an analog input which measures the voltage at the input and controls the valve based upon the measured reading as shown in this section.

SLAMf Series *Biotech*

Efficiency and simplicity combine to improve bioprocessing performance with the new SLAMf Series *Biotech* MFC. It incorporates several features created specifically to help streamline MFC purchasing, improve process gas control, enhance flexibility and satisfy regulatory requirements.

To serve the unique requirements of your bioprocesses, Brooks Instrument has created two SLAMf Series *Biotech* options packages, built on the proven performance of the bioprocess-leading SLAMf Series MFC .

As noted in the ordering instructions, all options are combined into packages with convenient ordering codes, eliminating the need to order options individually.

The *Biotech* Options Packages are not available on SLAMF64.

SLAMf Series *Biotech* Options Packages

Performance Package - Model Code S

Includes multiple performance enhancements reducing cost of operation

High Turndown Ratio

Reduces number of MFCs needed to control wide flow ranges

Enhanced Control Valve

Extremely low leak rate can eliminate need for redundant valves

Enhanced Sensor Design

Clean welded construction meets industry standards for cleanliness

Pre-calibrated Multi-Gas Pages¹²

Air, CO₂, N₂ & O₂ : gas pages can be changed in situ to reduce the variety of spare instruments kept in stock

Premium Package - Model Code T

Performance Package Features plus:

Includes premium materials and associated certificates tailored to industry requirements

Class VI Elastomers

FDA/USP Class VI and ADI Free O-Rings and Valve Seats¹³
(Certificate Included)

Certifications

Materials of Construction (wetted path)
2.1 Material Cert¹⁴
ICC Calibration Traceability

¹² CO₂ Actual Gas Calibration available for SLAMf50/60 & SLAMf51/61. Use Model Code U for Performance Package, and Model Code V for Premium package

¹³ All Class VI Viton elastomers are also compliant to 21CFR177.2600 (Title 21 – Food & Drugs, Chapter I - FDA)

¹⁴ 3.1 Material Certs for pressure boundary components available as an option on Premium Package

SLAMf Series *Biotech*

Performance	SLAMf5850/60	SLAMf5851/61	SLAMf5853/63	
Full Scale Flow Range (N ₂ , Eq. 0 Deg C Ref)	5 sccm -50 slpm	15 -150 slpm ₁	100 - 1100 slpm	>1100 - 2500 slpm
Gasses Supported ²	Air, CO ₂ , Nitrogen & Oxygen			
Flow Accuracy (includes linearity and calibration system measurement uncertainty per SEMI E69) ³	±0.9% of SP (20-100% FS), ±0.18% of FS (< 20% FS)			±1.0% of FS
Repeatability & Reproducibility	0.20% S.P.			
Turndown (control range)	250:1	250:1	150:1	
Response Time	< 1 Second	< 1 Second	< 3 Seconds	
Valve Shut Down (leak-by)	0.005 sccm		15.6 sccm	

¹ Maximum flow depends on pressure conditions; consult Applications Engineering for details

² Calibration on CO₂ available as an option on SLA5850/60 & SLA5851/61

³ Accuracy at Calibration Conditions ; accuracy spec valid across the full control range

Ratings	SLAMf5850/60	SLAMf5851/61	SLAMf5853/63	
Inlet Pressure Range	5 psig to 60 psig	10 psig to 60 psig	8 psig to 60 psig	
Minimum Pressure Differential ⁴ (Controllers)	5 psi/0.35 bar	10 psi/0.69 bar	Min.: 7.5 psi/0.52 bar at 500 lpm Min.: 14.5 psi/1.00 bar at 1000 lpm Min.: 35.0 psi/2.41 bar at 2500 lpm	
Maximum Pressure Differential (Controllers) ⁵	30 psi/ 2 bar	30 psi/ 2 bar	30 psi/ 2 bar	
Maximum Pressure	Same as standard			
Valve Configuration	Standard SLA with Special Factory Tuning/Normally Closed			
Ambient Temperature Range	-14°C - 50°C			
Sensor Design	Enhanced construction to meet industry standards for cleanliness			

⁴ Performance at minimum inlet pressure will be gas and flow range dependent. Consult Applications Engineering for details

⁵ For optimum performance operate at the specified inlet and outlet pressure values


Code Description	Code Option	Option Description
Biotech Options Packages	S	Performance Package ⁶
	T	Premium Package ⁷
	U	Performance Package with CO ₂ Calibration ⁸
	V	Premium Package with CO ₂ Calibration ⁸

⁶ Performance Package must be ordered for basic *Biotech* model features;

⁷ Premium Package includes Performance Package features.

⁸ Not available on SLAMf53 or SLAMf63

SLAMf60, Analog/RS485

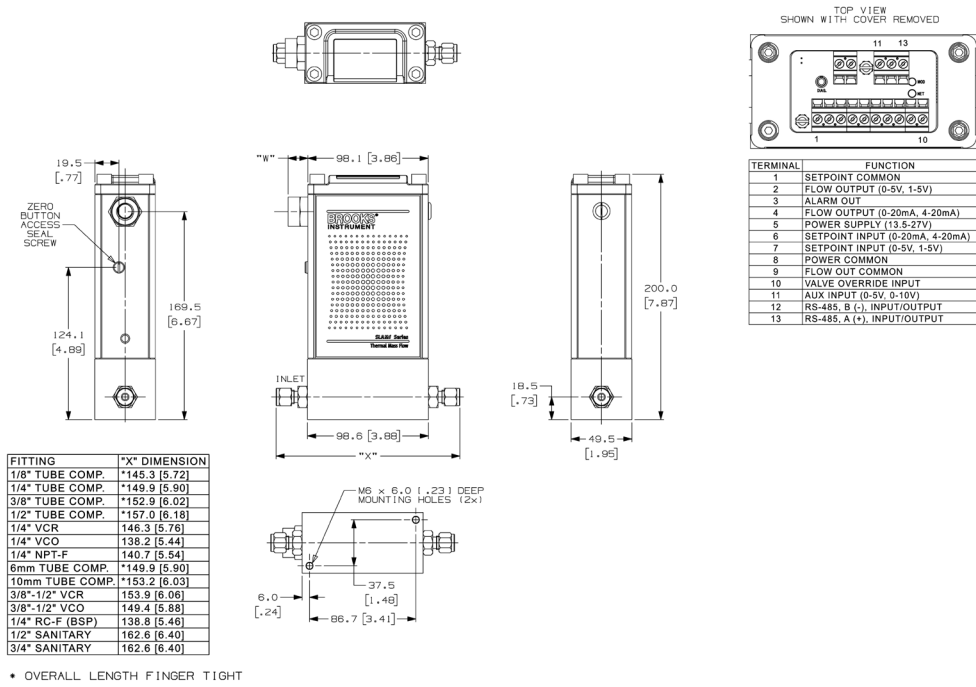

SLAMf60031B

Dimensional drawings for additional configurations are available in the corresponding Dimensional Drawing Quick Reference Guide or the Installation & Operation Manual

Code Description	Code Option	Option Description
I. Base Model Numbers	SLA	
II. Package / Finish Specifications	MF	Standard Elastomer Series
III. Function	5	Mass Flow Controller
	6	Mass Flow Meter
IV. Body Size	0	3 ccm - 50 lpm N ₂ Equivalent
	1	20 - 100 lpm N ₂ Equivalent
	3	100 - 2500 lpm N ₂ Equivalent
	4	300 - 36000 lpm N ₂ Equivalent
V. Digital I/O Communication	A	None (select applicable analog I/O)
	D	DeviceNet I/O (with 5-pin micro connector)
	E	EtherCAT
	J	DeviceNet I/O (with PG11 cable gland)
	K	DeviceNet I/O (with M20x1.5 conduit)
	L	DeviceNet I/O (with 1/2" NPT (F) conduit)
	P	Profibus (5-pin female M12, M20x1.5 conduit)
	R	Profibus (5-pin female M12, PG11 cable gland)
	T	Profibus (5-pin female M12, 1/2" NPT (F) conduit)
	S	RS485 (select applicable analog I/O)
	7	EtherNET/IP (5-pin M8 Male Nano; 2X M12 Female D coded Connector)
	8	PROFINET (5-pin M8 Male Nano; 2X M12 Female D coded Connector)
VI. Mechanical Connection (Body size 0 & 1 only)	1A	Without adapters, 9/16" - 18 UNF
	1B	1/4" tube compression
	1C	1/8" tube compression
	1D	3/8" tube compression
	1E	1/4" VCR
	1F	1/4" VCO
	1G	1/4" NPT
	1H	6mm tube compression
	1J	10mm tube compression
	1L	3/8"-1/2" VCR
	1M	3/8"-1/2" VCO
	1P	1/2" tube compression
	1T	1/4" RC (BSP)
	1Y	3mm tube compression
	B1	1/4" tube compression w/Filter
	C1	1/8" tube compression w/Filter
	D1	3/8" tube compression w/Filter
	E1	1/4" VCR w/Filter
	F1	1/4" VCO w/Filter
	G1	1/4" NPT w/Filter
	H1	6mm tube compression w/Filter
	J1	10mm tube compression w/Filter
	L1	3/8"-1/2" VCR w/Filter
	M1	3/8"-1/2" VCO w/Filter
	P1	1/2" tube compression w/Filter
	T1	1/4" RC (BSP) w/Filter
	Y1	3mm tube compression w/Filter
	5A ¹	9/16-18 X 1/2" Sanitary
	5B ²	9/16 -48 X 3/4" Sanitary
	VI. Mechanical Connection (Body size 3 unless noted Size 4 only. Size 4 noted)	2A
2B		1-1/16"-12 SAE/MS
2C		3/8" tube compression
2D		1/2" tube compression
2E		3/4" tube compression
2F		1" tube compression
2G		1/2" NPT (F)
2H		1" NPT (F)
2J		1-1/2" NPT (F) (Size 3 & 4)
2K		1/2" VCO
2L		3/4" VCO
2M		1/2" VCR
2N		1/2" RC (BSP)
2P		1" RC (BSP)
2R		1-5/16"-12 SAE/MS
2S		1" VCO
2T		3/4" VCR
2U		1" VCR
2W		2" NPT Size 4 only
2X ²		12 mm tube compression

Code Description	Code Option	Option Description
VI. Mechanical Connection (cont.) (Body size 3 unless noted Size 4 only. Size 4 noted)	3A	DIN DN15 PN40 Flange
	3B	DIN DN25 PN40 Flange
	3C	DIN DN40 PN40 Flange
	3D	DIN DN15 PN40 Flange
	3E	ANSI 1/2" 150# RF Flange
	3F	ANSI 1/2" 300# RF Flange
	3G	ANSI 1" 150# RF Flange
	3H	ANSI 1" 300# RF Flange
	3J	ANSI 1-1/2" 150# RF Flange (Size 3 & 4)
	3K	ANSI 1-1/2" 300# RF Flange
	3L	ANSI 2" 150# RF Flange
	3M	ANSI 2" 300# RF Flange
	3N	ANSI 3" 150# RF Flange (Size 4 only)
	3P	ANSI 3-1/2" 300# RF Flange (Size 4 only)
	3Q	ANSI 3" 600# RF Flange (Size 4 only)
	3R	DIN DN80 PN40 Flange (Size 4 only)
	3S	DIN DN80 PN64 Flange (Size 4 only)
	3T	DIN DN80 PN100 Flange (Size 4 only)
	4A	ANSI 4" 150# RF Flange (Size 4 only)
	4B	ANSI 4" 300# RF Flange (Size 4 only)
	4C	ANSI 4" 600# RF Flange (Size 4 only)
	4D	DIN DN100 PN16 Flange (Size 4 only)
	4E	DIN DN100 PN40 Flange (Size 4 only)
	4F	DIN DN100 PN64 Flange (Size 4 only)
	5C ¹	1 1/16-12 X 1/2" Sanitary
	5D ¹	1 1/16-12 X 3/4" Sanitary
	5E ¹	1 1/16-12 X 1" Sanitary
	6A	ANSI 6" 150# RF Flange (Size 4 only)
	6B	ANSI 6" 300# RF Flange (Size 4 only)
	6C	ANSI 6" 600# RF Flange (Size 4 only)
	6D	DIN DN150 PN16 Flange (Size 4 only)
	6E	DIN DN150 PN40 Flange (Size 4 only)
6F	DIN DN150 PN64 Flange (Size 4 only)	
8A	ANSI 8" 150# RF Flange (Size 4 only)	
8B	ANSI 8" 300# RF Flange (Size 4 only)	
8C	DIN DN200 PN10 Flange (Size 4 only)	
8D	DIN DN200 PN16 Flange (Size 4 only)	
8E	DIN DN200 PN25 Flange (Size 4 only)	
8F	DIN DN200 PN64 Flange (Size 4 only)	
VII. O-ring Material	A	Viton
	B	Buna
	C	PTFE
	D	Kalrez
	E	EPDM (Not available in Size 4)
	J	FDA/USP Class VI and ADI Free - Viton/FKM ² (Not available in Size 4)
	L	FDA/USP Class VI - EPDM (Not available in Size 4)
VIII. Valve Seat	A	None (Sensor only)
	B	Viton (for body size 3, diaphragm material = PTFE)
	C	Buna (for body size 3, diaphragm material = PTFE)
	D	Kalrez (for body size 3, diaphragm material = PTFE)
	E	EPDM (for body size 3, diaphragm material = PTFE) (Not available in Size 4)
	F	PTFE
	G	Metal (for body Size 3, diaphragm material = PTFE)
	J	FDA/USP Class VI and ADI Free - Viton/FKM ² (Not available in Size 4)

Code Description	Code Option	Option Description
IX. Valve Type	0	None (Sensor only)
	1	Normally closed
	2	Normally closed (Pressure diff. >30 psig (2 bar))
	3	Normally closed (Pressure diff. <30 psig (2 bar))
	4	Normally closed - high pressure
	5	Normally open
X. Analog I/O Communications	A	None - Digital Communications only
	E	4-20 mA 0-5 Volt PG11 Cable Gland
	F	0-5 Volt 0-5 Volt PG11 Cable Gland
	G	4-20 mA 4-20 mA PG11 Cable Gland
	H	0-5 Volt 4-20 mA PG11 Cable Gland
	I	0-5 Volt 0-20 mA PG11 Cable Gland
	J	0-5 Volt 0-5 Volt 1/2" NPT (F) Conduit
	K	4-20 mA 4-20 mA 1/2" NPT (F) Conduit
	N	0-5 Volt 4-20 mA M20x1.5 Conduit
	O	0-5 Volt 0-20 mA M20x1.5 Conduit
	P	4-20 mA 0-5 Volt M20x1.5 Conduit
	Q	0-20 mA 0-5 Volt M20x1.5 Conduit
	R	1-5 Volt 1-5 Volt PG11 Cable Gland
	S	0-20 mA 0-20 mA PG11 Cable Gland
	T	1-5 Volt 1-5 Volt 1/2" NPT (F) Conduit
	U	0-20 mA 0-20 mA 1/2" NPT (F) Conduit
	V	0-5 Volt 0-5 Volt M20x1.5 Conduit
	W	1-5 Volt 1-5 Volt M20x1.5 Conduit
	X	0-20 mA 0-20 mA M20x1.5 Conduit
	Y	4-20 mA 4-20 mA M20x1.5 Conduit
Z	0-20 mA 0-5 Volt PG11 Cable Gland	
5	0-5 Volt 4-20 mA 1/2" NPT (F) Conduit	
6	0-5 Volt 0-20 mA 1/2" NPT (F) Conduit	
7	4-20 mA 0-5 Volt 1/2" NPT (F) Conduit	
8	0-20 mA 0-5 Volt 1/2" NPT (F) Conduit	
XI. Power Supply Inputs	1	±15 Vdc
	2	24 Vdc
XII. Output Enhancements	A	Standard response
	S	Biotech Performance Package
	T	Biotech Premium Package
	U	Performance Package with CO ₂ Calibration ³
	V	Premium Package with CO ₂ Calibration ³
XIII. Certification	1	Safe Area
	2	For Zone 2 Atex
	3	Div. 2 / Zone 2 UL Listed
	4	Div. 2 / Zone 2 UL Recognized
	5	Zone 2 IECEx
	6	KOSHA

Sample Standard Model Code

I	II	III	IV	V	VI	VII	VIII	IX	X	XI	XII	XIII
SLA	MF	4	0	S	1A	A	B	1	E	1	A	1

¹ Sanitary Fittings Model Code 5A, 5B, 5C, 5D and 5E are limited to 500 PSI Maximum Pressure

² Material is compliant to 21CFR177.2600 (Title 21 – Food & Drugs, Chapter I - FDA)

³ CO₂ Actual Gas Calibration available for SLA5850/60 & SLA5851/61

По вопросам продаж и поддержки обращайтесь:

Алматы (7273)495-231	Казань (843)206-01-48	Новокузнецк (3843)20-46-81	Смоленск (4812)29-41-54
Архангельск (8182)63-90-72	Калининград (4012)72-03-81	Новосибирск (383)227-86-73	Сочи (862)225-72-31
Астрахань (8512)99-46-04	Калуга (4842)92-23-67	Омск (3812)21-46-40	Ставрополь (8652)20-65-13
Барнаул (3852)73-04-60	Кемерово (3842)65-04-62	Орел (4862)44-53-42	Сургут (3462)77-98-35
Белгород (4722)40-23-64	Киров (8332)68-02-04	Оренбург (3532)37-68-04	Тверь (4822)63-31-35
Брянск (4832)59-03-52	Краснодар (861)203-40-90	Пенза (8412)22-31-16	Томск (3822)98-41-53
Владивосток (423)249-28-31	Красноярск (391)204-63-61	Пермь (342)205-81-47	Тула (4872)74-02-29
Волгоград (844)278-03-48	Курск (4712)77-13-04	Ростов-на-Дону (863)308-18-15	Тюмень (3452)66-21-18
Вологда (8172)26-41-59	Липецк (4742)52-20-81	Рязань (4912)46-61-64	Ульяновск (8422)24-23-59
Воронеж (473)204-51-73	Магнитогорск (3519)55-03-13	Самара (846)206-03-16	Уфа (347)229-48-12
Екатеринбург (343)384-55-89	Москва (495)268-04-70	Санкт-Петербург (812)309-46-40	Хабаровск (4212)92-98-04
Иваново (4932)77-34-06	Мурманск (8152)59-64-93	Саратов (845)249-38-78	Челябинск (351)202-03-61
Ижевск (3412)26-03-58	Набережные Челны (8552)20-53-41	Севастополь (8692)22-31-93	Череповец (8202)49-02-64
Иркутск (395)279-98-46	Нижний Новгород (831)429-08-12	Симферополь (3652)67-13-56	Ярославль (4852)69-52-93
Россия (495)268-04-70	Киргизия (996)312-96-26-47	Казахстан (7172)727-132	